


HOISTWAY SECTION
WITH CWT SAFETY

*1,*2 : AS SHOWN IN THE FIGURE ABOVE, AN INSPECTION HATCH FOR USE IN THE MAINTENANCE OF THE CAR DOOR OPERATOR SHALL BE PROVIDED ABOVE THE ENTRANCE ON THE BOTTOM FLOOR, IF THE LANDING IS THE ONLY ONE IN THAT SIDE. HOWEVER, THIS INSPECTION HATCH WILL BE UNNECESSARY, IF THE PIT DEPTH CAN BE DEEPENED BY 0'-6 1/2" [165].

SPECIFICATIONS	
SERIES	DIAMOND TRAC
LOAD	4000 LBS [1800 kg]
SPEED	200 FPM [60 m/min]
REGULATION / CODE	ASME A17.1S - 2005
TRAVEL	MAX. TRAVEL : 196'-10 7/32" [60000]
DOOR TYPE	CO
GUIDE RAIL	CAR T127-1/B, T127-2/B, T140-1/B
CWT	T127-1/B, T127-2/B, T140-1/B
CWT SAFETY	APPLIED

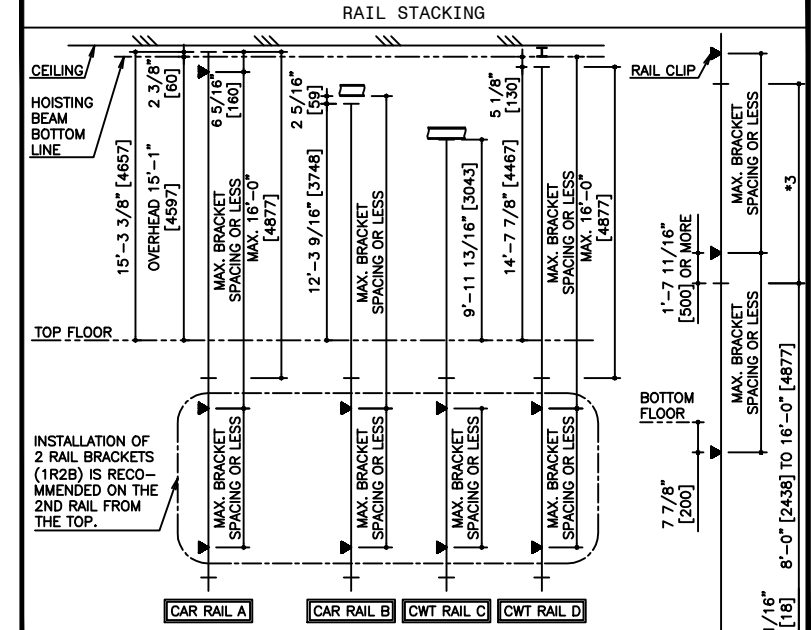

*3 STUDY THE LENGTH OF RAILS EXCEPT THE TOP AND BOTTOM RAILS IN EACH PROJECT.

RAIL BRACKET SPACING						
SEISMIC ZONE	ZONE 0 TO 2			ZONE 3 & 4		
RAIL SIZE	T127-1/B	T127-2/B	T140-1/B	T127-1/B	T127-2/B	T140-1/B
RAIL BRACKET SPACING	CAR	CWT	CAR	CWT	CAR	CWT
	11'-11 11/16" [3650]	10'-11 7/8" [3300]	12'-3 5/8" [3700]	11'-7 3/4" [3550]	15'-7" [4750]	14'-7 3/16" [4450]
	7'-8 1/2" [2350]	7'-8 1/2" [2350]	10'-7 15/16" [3250]	10'-6" [3200]	14'-5 1/8" [4300]	13'-3 7/16" [4050]

RAIL REACTION LOAD				
SEISMIC ZONE	CAR RAIL A, B		CWT RAIL C, D	
	FIX	FIY	FIX	FIY
	ZONE 0 TO 2	1800 LBS [8100 N]	900 LBS [4100 N]	2000 LBS [8900 N]
ZONE 3 & 4	3500 LBS [15600 N]	1800 LBS [8100 N]	4000 LBS [17800 N]	2000 LBS [8900 N]

CAR HITCH BEAM LOAD			
STATIC LOAD		DYNAMIC LOAD	
RA	RB	RA	RB
5400 LBS [24000 N]	1600 LBS [7000 N]	10800 LBS [48000 N]	3200 LBS [14000 N]


PIT REACTION LOAD						
SEISMIC ZONE (RAIL SIZE)	RAIL REACTION LOAD				BUFFER REACTION LOAD	
	R1	R2	R3	R4	P1	P2
T127-1/B	15900 LBS [71000 N]	14800 LBS [66000 N]	15100 LBS [68000 N]	13300 LBS [59000 N]	47200 LBS [210000 N]	39400 LBS [175000 N]
T127-2/B	16600 LBS [74000 N]	15500 LBS [69000 N]	15900 LBS [71000 N]	14000 LBS [62000 N]		
T140-1/B	17400 LBS [77000 N]	16300 LBS [73000 N]	16600 LBS [74000 N]	14700 LBS [66000 N]		

POWER FEEDER DATA 1CAR												
MOTOR		STANDARD VOLTAGE 208V			STANDARD VOLTAGE 480V			POWER SUPPLY CAPACITY		HEAT EMISSION		
[HP]	[kW]	CURRENT	BREAKER IN CONTROL PANEL	CURRENT	BREAKER IN CONTROL PANEL	CURRENT	BREAKER IN CONTROL PANEL	[kVA]	HOISTWAY (EXCEPT CAR LIGHTING)	CONTROL PANEL ROOM		
[A]	[A]	[A]	[A]	[A]	[A]	[A]	[A]	[W]	[W]	[W]		
16.1	12	52	91	75	23	40	30	12	2390	700	4780	1400

POWER CURRENT CORRESPONDING TO LOCAL SUPPLY VOLTAGE (FLU or FLAcc) [A]
= EACH CURRENT (FLU or FLAcc) [A] X STANDARD VOLTAGE (E1 or E2) [V]
= EACH CURRENT (FLU or FLAcc) [A] X LOCAL SUPPLY VOLTAGE (E) [V]

NO.	DATE	BY	REVISIONS
-	03/16/10	-	CREATED DRAWING

PROJECT:	-
ELEV. NO.:	-
DWG. TITLE:	-
ADMIN. NO.:	-
DWG. NO.:	EZ-B-0131
REV.	

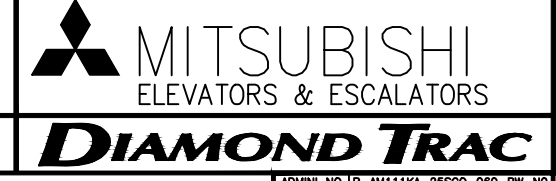

DISCLAIMER:
THESE CAD DRAWINGS SHOULD BE USED FOR REFERENCE ONLY. MEUS DISCLAIMS ALL RESPONSIBILITY FOR ANY REPRODUCTION, MODIFICATION, DISTRIBUTION OR INTEGRATION OF THESE CAD DRAWINGS INTO OTHER ARCHITECTURAL AND STRUCTURAL DRAWINGS. MEUS MARKETS NO WARRANTIES OF ANY KIND WITH RESPECT TO THE ACCURACY OR COMPLETENESS OF THESE CAD SCHEMATIC DRAWINGS FOR ANY PURPOSE. MEUS HEREBY EXPRESSLY DISCLAIMS ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.
Copyright (c) 2005 Mitsubishi Electric & Electronic USA, Inc. All rights reserved.

NOTE :
WHEN THE CANOPY HEIGHT IS CHANGED FROM THE DIMENSION ON THIS DRAWING, OVERHEAD AND THE BRACKET SPAN FOR UPPER RAILS SHALL BE CHANGED AS WELL.

SCALE : 1/50

NOT TO BE USED FOR CONSTRUCTION